 


Garmin eTrex Legend Basics

The Keys

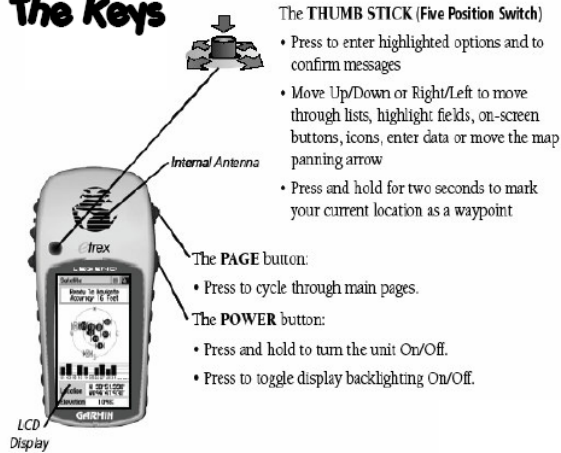

The THUMB STICK (Five Position Switch)

- Press to enter highlighted options and to confirm messages
- Move Up/Down or Right/Left to move through lists, highlight fields, on-screen buttons, icons, enter data or move the map panning arrow
- Press and hold for two seconds to mark your current location as a waypoint

The PAGE button:

 
- Press to cycle through main pages.

The POWER button:


- Press and hold to turn the unit On/Off.
- Press to toggle display backlighting On/Off.

Display Screens

Use the PAGE button on the top right of the receiver to switch between the different screens.

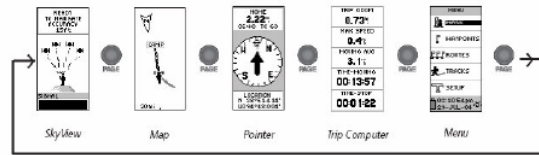


Satellite Page

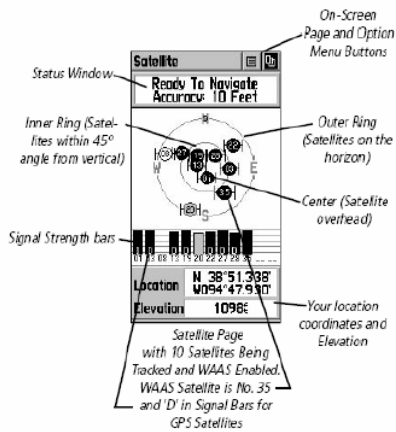 

The dark bars show the satellites you are "locked" on. You need at least 3 bars to use the receiver.

 Pointer Page Basics

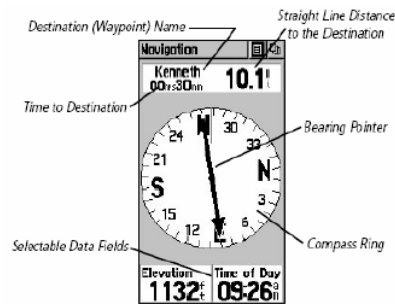

Go in the direction the arrow is pointing to move towards your waypoint or landmark.

NOTE: You must be moving in order for the GPS unit to determine where you are and which way you are moving.